

Pinout Guide for 1738 ArmorPOINT Adapters and Power Supplies

Catalog Numbers 1738-ADN12, 1738-ADN18, 1738-ADN18P,
1738-ADNX, 1738-APB, 1738-AENT, 1738-AENTR,
1738-ACNR, 1738-FPD, 1738-EP24DC, Series B

Parts List

Your package contains one 1738 ArmorPOINT I/O™ module and these wiring instructions.

For complete installation instructions, refer to the Module Publication Number table and visit <http://rockwellautomation.com/literature>.

Module Publication Number

Module	Publication Number
ArmorPOINT DeviceNet Adapter Modules (1738-ADN12, 1738-ADN18, 1738-ADN18P, 1738-ADNX)	1738-IN014
ArmorPOINT I/O PROFIBUS Adapter Module (1738-APB)	1738-IN015
ArmorPOINT I/O ControlNet Adapter Module (1738-ACNR)	1738-IN016
ArmorPOINT I/O ControlNet Adapter Module Release Notes (1738-ACNR)	1738-RN001
ArmorPOINT I/O EtherNet/IP Dual Port Adapter Module (1738-AENTR)	1738-IN030
POINT I/O and ArmorPOINT I/O EtherNet/IP Dual Port Adapters FRN 4.002 Release Notes (1734-AENTR, 1738-AENTR)	1734-RN010
ArmorPOINT I/O EtherNet/IP Dual Port Adapter Module (1738-AENTR)	1738-IN030
ArmorPOINT I/O EtherNet/IP Adapter Module (1738-AENT)	1738-IN031
ArmorPOINT I/O Field Potential Distributor Module (1738-FPD)	1738-IN019
ArmorPOINT I/O Power Supply Module (1738-EP24DC)	1738-IN020